 


Remote control buttons

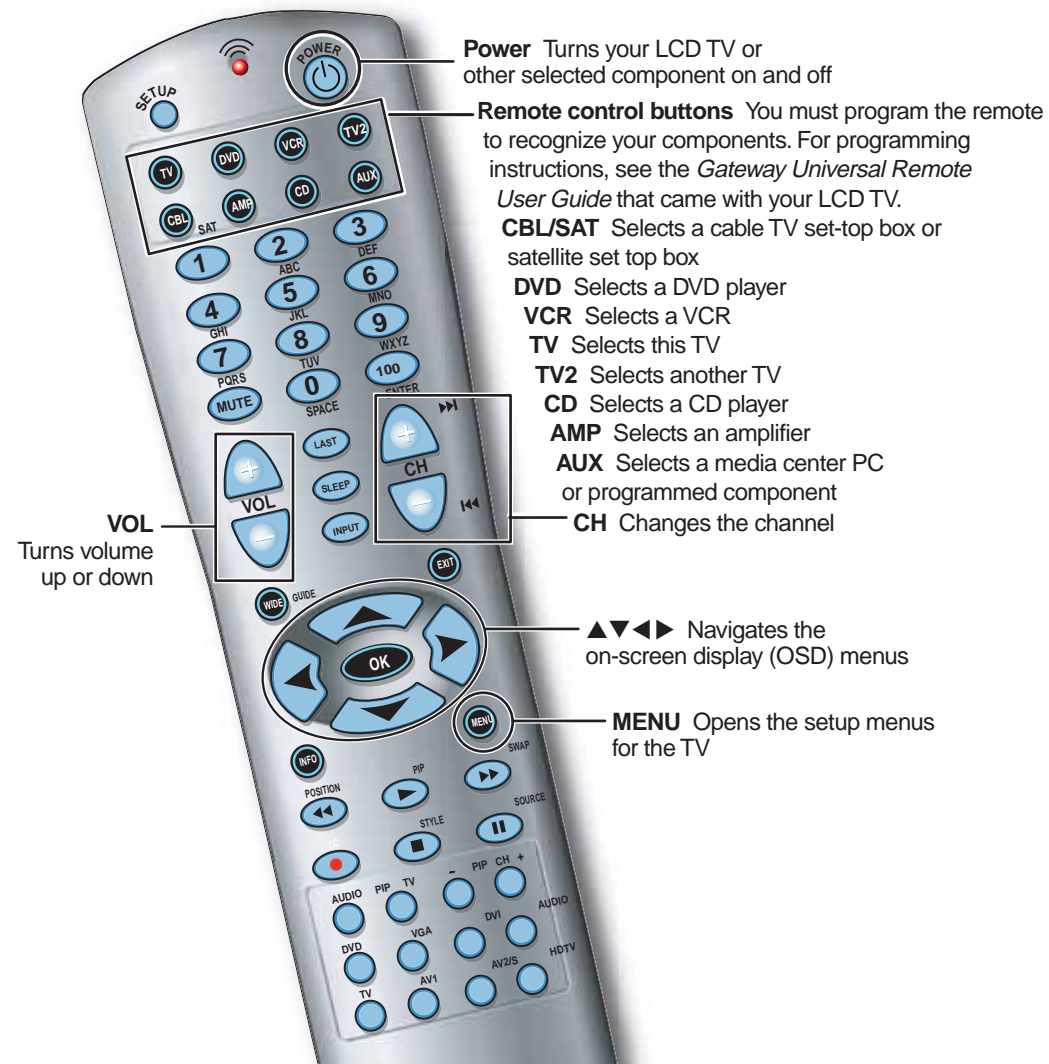

Viewing modes

Your LCD TV features four viewing modes and Picture-in-Picture (PIP) mode. You can switch viewing modes using the on-screen display (OSD) or the remote control.

For additional information about using viewing modes, see "Understanding viewing features" in your *Gateway HD LCD TV User Guide*.



Standard (4:3 mode)



Widescreen (16:9 mode)

For detailed information and advanced features, see the user guides


Using the on-screen display

To adjust the settings from the OSD:


1. Press the **MENU** button on the front of your LCD TV. The OSD opens.
2. Press the **MENU** button on the front of your LCD TV to select the menu you want.
3. Press the **CH** ▲ and ▼ button on the front of your LCD TV to select a menu option.
4. Press the **VOL** ◀ and ▶ button on the front of your LCD TV to adjust the option setting.
5. Press the **MENU** button on the front of your LCD TV. The OSD closes.

You can also use your remote control to change some settings. For more information, see the remote control user guide.

For detailed information on using the OSD menus and options, see "Using the on-screen display" in your TV user guide.

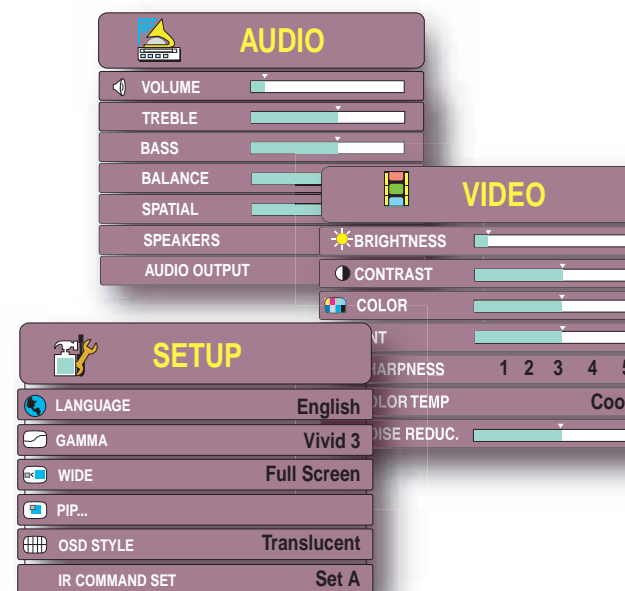

Package Contents

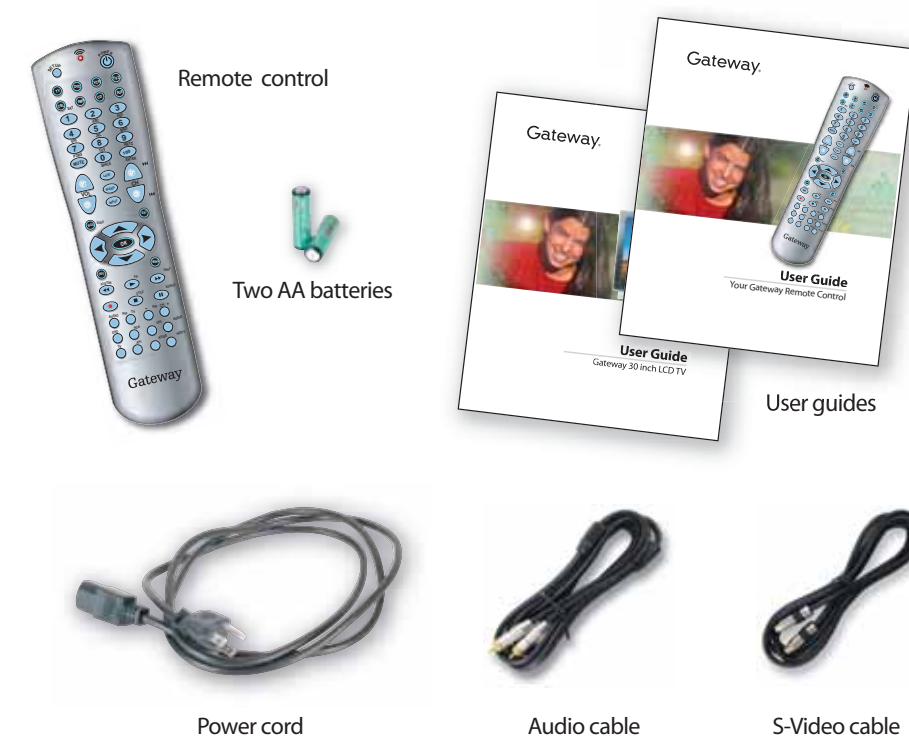

Accessories

You can purchase these optional accessories for your LCD TV:

Cables Gateway has all the cables you may need to complete your TV installation, including:


- DVI-D video cable
- RCA audio cable
- S-Video cable
- VGA video cable
- RCA component video cable
- RCA composite video cable

Go to accessories.gateway.com for these and other accessories.

Getting help

See your documentation
Refer to the documentation that came with your LCD TV, or go to support.gateway.com to get the online documentation.

Check Gateway eSupport
For frequently asked questions, setup help, and immediate information on common technical issues, go to support.gateway.com.

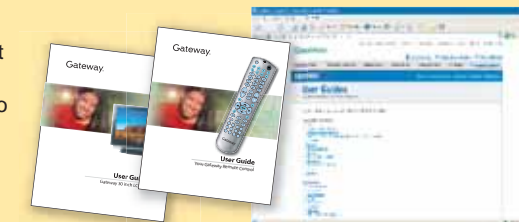

MAN 30" LCD TV SETUP PSTR R1 12/04



8 27103 05276 3