

CPU Upgrade Instructions

This Technote relates to the ALR 7200, 8200, 8200R, 7300, 8300, 8300R, 9200, 9200R, 9400, and 9400R systems.

Installing a central processing unit (CPU) is described in the Maintaining and Troubleshooting manual provided with each system. When preparing to upgrade an existing processor or install an additional processor, look up the instructions in the Maintaining and Troubleshooting manual. Instructions for setting any processor jumpers are also provided in the Maintaining and Troubleshooting manual.

